Non-Metallic Center Sections


E1

E1 Non-Metallic Pumps

Polypropylene

• PVDF



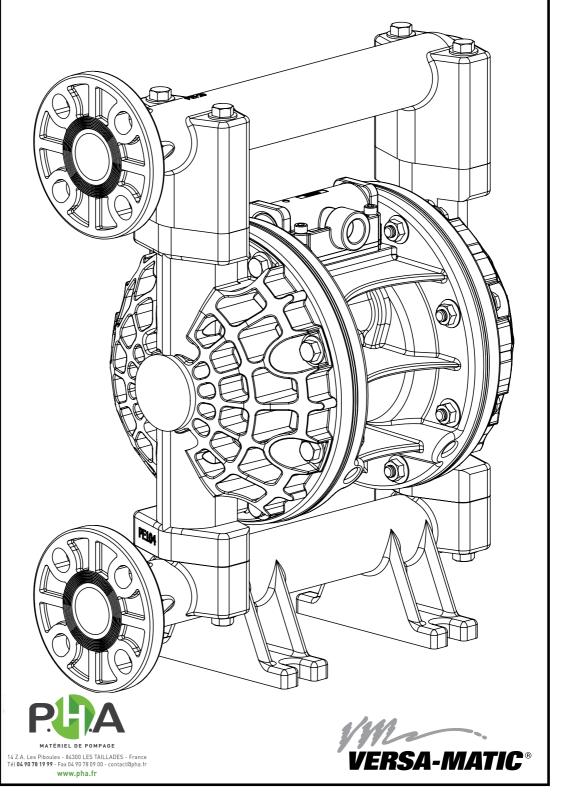

1: PUMP SPECS

2: INSTAL & OP

3: EXP VIEW

4: WARRANTY

Safety Information

A IMPORTANT



Read the safety warnings and instructions in this manual before pump installation and start-up. Failure to comply with the recommendations stated in this manual could damage the pump and void factory warranty.



When the pump is used for materials that tend to settle out or solidify, the pump should be flushed after each use to prevent damage. In freezing temperatures the pump should be completely drained between uses.

A CAUTION



Before pump operation, inspect all fasteners for loosening caused by gasket creep. Retighten loose fasteners to prevent leakage. Follow recommended torques stated in this manual.



Nonmetallic pumps and plastic components are not UV stabilized. Ultraviolet radiation can damage these parts and negatively affect material properties. Do not expose to UV light for extended periods of time.

WARNING



When used for toxic or aggressive fluids, the pump should always be flushed clean prior to disassembly.



Before maintenance or repair, shut off the compressed air line, bleed the pressure, and disconnect the air line from the pump. Be certain that approved eye protection and protective clothing are worn at all times. Failure to follow these recommendations may result in serious injury or death.



Airborne particles and loud noise hazards. Wear eye and ear protection.



In the event of diaphragm rupture, pumped material may enter the air end of the pump, and be discharged into the atmosphere. If pumping a product that is hazardous or toxic, the air exhaust must be piped to an appropriate area for safe containment.




Take action to prevent static sparking. Fire or explosion can result, especially when handling flammable liquids. The pump, piping, valves, containers and other miscellaneous equipment must be properly grounded.



This pump is pressurized internally with air pressure during operation. Make certain that all fasteners are in good condition and are reinstalled properly during reassembly.

Grounding the Pump

To be fully groundable, the pumps must be ATEX Compliant. Refer to the nomenclature page for ordering information.

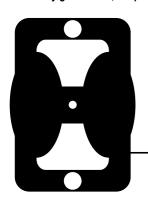

Optional 8 foot long (244 centimeters) Ground Strap is available for easy ground connection.

To reduce the risk of static electrical sparking, this pump must be grounded. Check the local electrical code for detailed grounding instruction and the type of equipment required.

Refer to nomenclature page for ordering information.

A WARNING



Take action to prevent static sparking. Fire or explosion can result, especially when handling flammable liquids. The pump, piping, valves, containers or other miscellaneous equipment must be grounded.



Table of Contents

SECTION 1: PUMP SPECIFICATIONS......1

- Nomenclature
- Performance
- Materials
- Dimensional Drawings

SECTION 2: INSTALLATION & OPERATION......6

- Principle of Pump Operation
- Typical Installation Guide
- Troubleshooting

SECTION 3: EXPLODED VIEW.....9


- Composite Drawings
- Parts List
- Materials Code

SECTION 4: WARRANTY & CERTIFICATES11

- Warranty
- CE Declaration of Conformity Machinery

Explanation of Pump Nomenclature

Your Serial #: (fill in from pump nameplate)

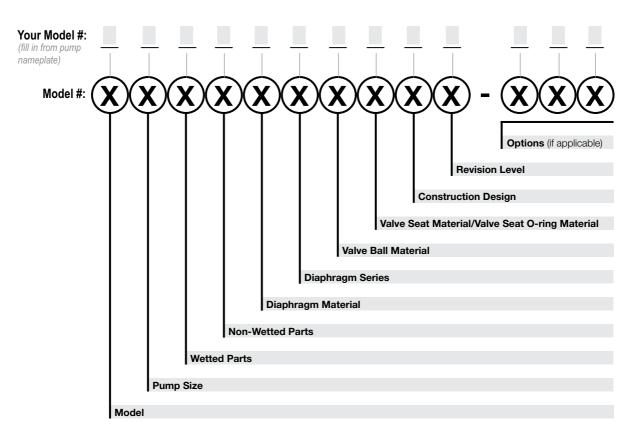

Model	Pump Size	Wetted Parts	Non-Wetted Parts	Diaphragm Material
E Elima-Matic	6 1/4"	A Aluminum	A Aluminum	1 Neoprene
U Ultra-Matic	8 3/8"	C Cast Iron	S Stainless Steel	2 Nitrile (Nitrile)
V V-Series	5 1/2"	S Stainless Steel	P Polypropylene	3 FKM (Fluorocarbon)
RE AirVantage	7 3/4"	H Alloy C	G Groundable Acetal	4 EPDM
	1 1"	P Polypropylene	Z PTFE-coated Aluminum	5 PTFE
	4 1-1/4" or 1-1/2"	K Kynar	J Nickel-plated Aluminum	6 Santoprene XL
	2 2"	G Groundable Acetal	C Cast Iron	7 Hytrel
	3 3"	B Aluminum (screen mount)	Q Epoxy-Coated Aluminum	9 Geolast

Diaphragm Series R Rugged

D Dome X Thermo-Matic T Tef-Matic (2-piece)

F FUSION (one-piece

B Versa-Tuff (1-piece) integrated plate)

Valve Ball Material Valve Seat/Valve Seat O-Ring Material Construction Design

1 Neoprene 1 Neoprene 2 Nitrile 2 Nitrile

3 (FKM) Fluorocarbon 3 (FKM) Fluorocarbon 4 EPDM 4 EPDM 5 PTFE 5 PTFE

6 Santoprene XL 6 Santoprene XL 7 Hytrel 7 Hytrel **8** Polyurethane 8 Polyurethane 9 Geolast 9 Geolast

A Acetal A Aluminum w/ PTFE O-Rings S Stainless Steel S Stainless Steel w/ PTFE O-Rings C Carbon Steel w/ PTFE O-Rings H Alloy C w/ PTFE O-Rings

T PTFE Encapsulated Silicone O-Rings

9 Bolted 0 Clamped



Materials

Material Profile:	Operating Temperatures:	
CAUTION! Operating temperature limitations are as follows:	Max.	Min.
Conductive Acetal: Tough, impact resistant, ductile. Good abrasion resistance and low friction surface. Generally inert, with good chemical resistance except for strong acids and oxidizing agents.	190°F 88°C	-20°F -29°C
EPDM: Shows very good water and chemical resistance. Has poor resistance to oils and solvents, but is fair in ketones and alcohols.	280°F 138°C	-40°F -40°C
FKM: (Fluorocarbon) Shows good resistance to a wide range of oils and sovents; especially all aliphatic, aromatic and halogenated hydrocarbons, acids, animal and vegetable oils. Hot water or hot aqueous solutions (over 70°F) will attack FKM.	350°F 177°C	-40°F -40°C
Hytrel®: Good on acids, bases, amines and glycols at room temperatures only.	220°F 104°C	-20°F -29°C
Neoprene: All purpose. Resistance to vegetable oils. Generally not affected by moderate chemicals, fats, greases and many oils and solvents. Generally attacked by strong oxidizing acids, ketones, esters and nitro hydrocarbons and chlorinated aromatic hydrocarbons.	200°F 93°C	-10°F -23°C
Nitrile: General purpose, oil-resistant. Shows good solvent, oil, water and hydraulic fluid resistance. Should not be used with highly polar solvents like acetone and MEK, ozone, chlorinated hydrocarbons and nitro hydrocarbons.	190°F 88°C	-10°F -23°C
Nylon: 6/6 High strength and toughness over a wide temperature range. Moderate to good resistance to fuels, oils and chemicals.	180°F 82°C	32°F 0°C

Polypropylene: A thermoplastic polymer. Moderate tensile and flex strength. Resists stong acids and alkali. Attacked by chlorine, fuming nitric acid and other strong oxidizing agents.	180°F 82°C	32°F 0°C
PVDF: (Polyvinylidene Fluoride) A durable fluoroplastic with excellent chemical resistance. Excellent for UV applications. High tensile strength and impact resistance.	250°F 121°C	0°F -18°C
Santoprene®: Injection molded thermoplastic elastomer with no fabric layer. Long mechanical flex life. Excellent abrasion resistance.	275°F 135°C	-40°F -40°C
UHMW PE: A thermoplastic that is highly resistant to a broad range of chemicals. Exhibits outstanding abrasion and impact resistance, along with environmental stress-cracking resistance.	180°F 82°C	-35°F -37°C
Urethane: Shows good resistance to abrasives. Has poor resistance to most solvents and oils.	150°F 66°C	32°F 0°C
Virgin PTFE: (PFA/TFE) Chemically inert, virtually impervious. Very few chemicals are known to chemically react with PTFE; molten alkali metals, turbulent liquid or gaseous fluorine and a few fluoro-chemicals such as chlorine trifluoride or oxygen difluoride which readily liberate free fluorine at elevated temperatures.	220°F 104°C	-35°F -37°C

Maximum and Minimum Temperatures are the limits for which these materials can be operated. Temperatures coupled with pressure affect the longevity of diaphragm pump components. Maximum life should not be expected at the extreme limits of the temperature ranges.

Metals:

Alloy C: Equal to ASTM494 CW-12M-1 specification for nickel and nickel alloy.

Stainless Steel: Equal to or exceeding ASTM specification A743 CF-8M for corrosion resistant iron chromium, iron chromium nickel and nickel based alloy castings for general applications. Commonly referred to as 316 Stainless Steel in the pump industry.

For specific applications, always consult the Chemical Resistance Chart.

AFTERMARKET PARTS

RIGHT PART, RIGHT NOW

Pumper Parts is your single source for parts that fit Air-Operated Double Diaphragm (AODD) pumps

- Wilden®
- ARO®
- Yamada®




Pumper Parts and its products are not affiliated with any of the original equipment manufacturers referenced herein. All original equipment manufacturers' names, colors, pictures, descriptions and part numbers are used for identification purposes only. Pumper Parts' is a registered trade name of IDEX Corporation. All other trademarks, registered trademarks and product names are the property of their respective owners. Yarnada' is a registered trademark of Yarnada Corporation. ARO' is a registered trade name of Ingersoil-Rand Company. Wilden' is a registered trade name of Wilden Pump and Engineering Company, a Dover Resources Company.



Performance

E1 1" Bolted Plastic Rubber and TPE Fitted


Flow Rate
Adjustable to 0-43 gpm (162.8 LPM)
Port Size
Suction 1" 150# ANSI/DIN 325 Flange
Discharge 1" 150# ANSI/DIN 325 Flange
Air Inlet
Air Exhaust
Suction Lift
Dry
Wet
Max Solid Size (Diameter)
1/8" (3.1 mm)
Max Noise Level
Shipping Weights
Polypropylene
PVDF

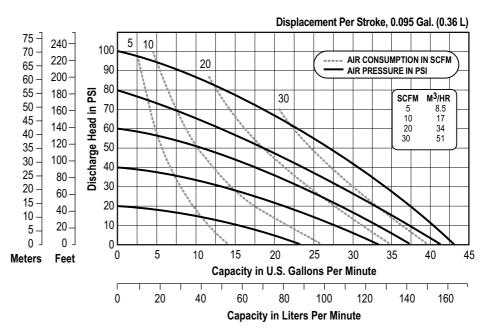


NOTE: Performance based on the following: elastomeric fitted pump, flooded suction, water at ambient conditions. The use of other materials and varying hydraulic conditions may result in deviations in excess of 5%.

E1 1" Bolted Plastic PTFE Fitted

Flow Rate
Adjustable to 0-36 gpm (136.3 LPM)
Port Size
Suction 1" 150# ANSI/DIN 325 Flange
Discharge 1" 150# ANSI/DIN 325 Flange
Air Inlet 3/8" NPT
Air Exhaust 1/2" NPT
Suction Lift
Dry
Wet31' (9.4 m)
Max Solid Size (Diameter)
1/8" (3.2 mm)
Max Noise Level 95 dB(A)
Shipping Weights
Polypropylene
PVDF

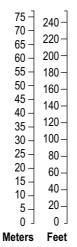

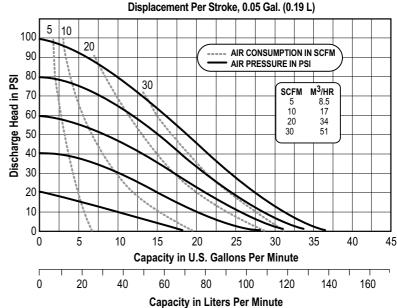

NOTE: Performance based on the following: PTFE fitted pump, flooded suction, water at ambient conditions. The use of other materials and varying hydraulic conditions may result in deviations in excess of 5%.





Dimensional Drawings

E1 Non-Metallic Bolted

Dimensions in inches (mm dimensions in brackets)

The dimensions on this drawing are for reference only. A certified drawing can be requested if physical dimensions are needed.

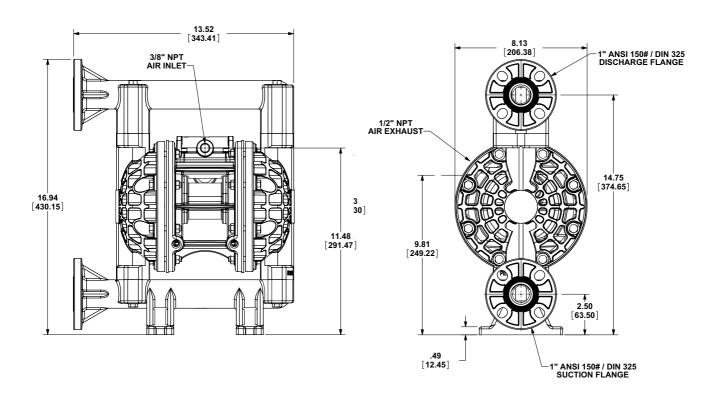


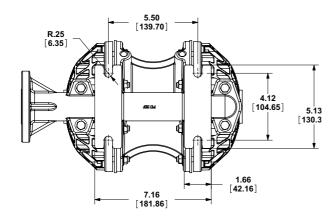





Dimensional Drawings

E1 Non-Metallic Bolted (Center Ported Manifold Option)Dimensions in inches (mm dimensions in brackets) The dimensions on this drawing are for reference only. A certified drawing can be requested if physical dimensions are needed.

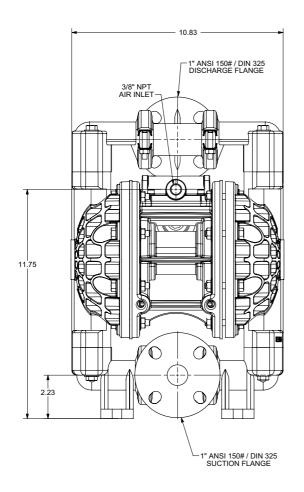


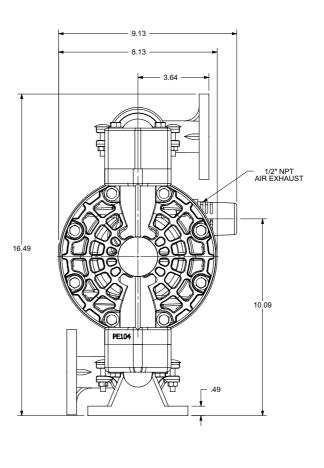

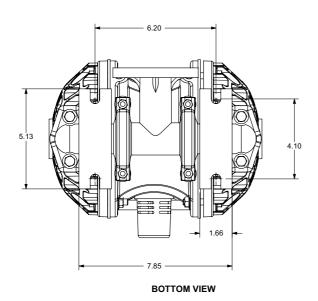



Principle of Pump Operation

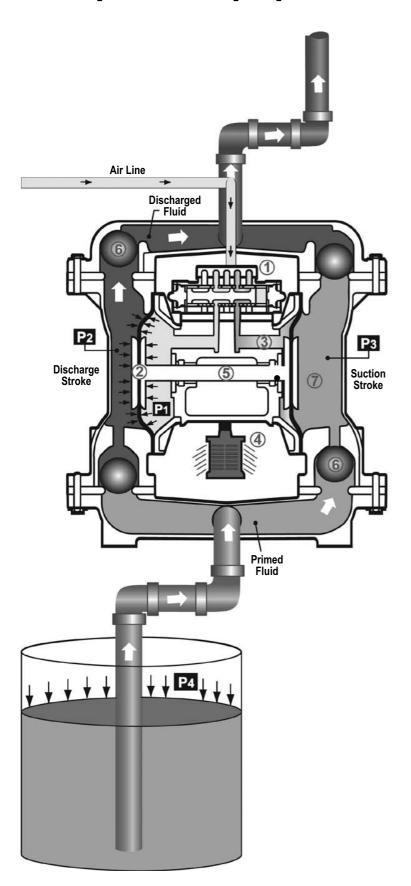

Air-Operated Double Diaphragm (AODD) pumps are powered by compressed air, nitrogen or natural gas.


The main directional (air) control valve ① distributes compressed air to an air chamber, exerting uniform pressure over the inner surface of the diaphragm ②. At the same time, the exhausting air ③ from behind the opposite diaphragm is directed through the air valve assembly(s) to an exhaust port ④.

As inner chamber pressure **(P1)** exceeds liquid chamber pressure **(P2)**, the rod ⑤ connected diaphragms shift together creating discharge on one side and suction on the opposite side. The discharged and primed liquid's directions are controlled by the check valves (ball or flap)⑥ orientation.

The pump primes as a result of the suction stroke. The suction stroke lowers the chamber pressure (P3) increasing the chamber volume. This results in a pressure differential necessary for atmospheric pressure (P4) to push the fluid through the suction piping and across the suction side check valve and into the outer fluid chamber T.

Suction (side) stroking also initiates the reciprocating (shifting, stroking or cycling) action of the pump. The suction diaphragm's movement is mechanically pulled through its stroke. The diaphragm's inner plate makes contact with an actuator plunger aligned to shift the pilot signaling valve. Once actuated, the pilot valve sends a pressure signal to the opposite end of the main directional air valve, redirecting the compressed air to the opposite inner chamber.


SUBMERGED ILLUSTRATION

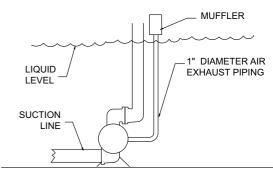

Pump can be submerged if the pump materials of construction are compatible with the liquid being pumped. The air exhaust must be piped above the liquid level. When the pumped product source is at a higher level than the pump (flooded suction condition), pipe the exhaust higher than the product source to prevent siphoning spills.



Recommended Installation Guide

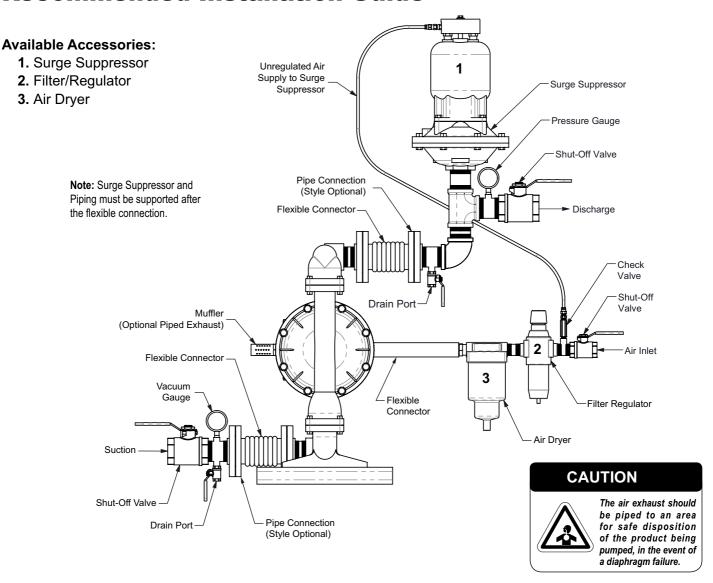

Installation And Start-Up

Locate the pump as close to the product being pumped as possible. Keep the suction line length and number of fittings to a minimum. Do not reduce the suction line diameter.

Air Supply

Connect the pump air inlet to an air supply with sufficient capacity and pressure to achieve desired performance. A pressure regulating valve should be installed to insure air supply pressure does not exceed recommended limits.

Air Valve Lubrication

The air distribution system is designed to operate WITHOUT lubrication. This is the standard mode of operation. If lubrication is desired, install an air line lubricator set to deliver one drop of SAE 10 non-detergent oil for every 20 SCFM (9.4 liters/sec.) of air the pump consumes. Consult the Performance Curve to determine air consumption.

Air Line Moisture

Water in the compressed air supply may cause icing or freezing of the exhaust air, causing the pump to cycle erratically or stop operating. Water in the air supply can be reduced by using a point-of-use air dryer.

Air Inlet And Priming

To start the pump, slightly open the air shut-off valve. After the pump primes, the air valve can be opened to increase air flow as desired. If opening the valve increases cycling rate, but does not increase the rate of flow, cavitation has occurred. The valve should be closed slightly to obtain the most efficient air flow to pump flow ratio.




Troubleshooting Guide

Symptom:	Potential Cause(s):	Recommendation(s):
Pump Cycles Once	Deadhead (system pressure meets or exceeds air	Increase the inlet air pressure to the pump. Pump is designed for 1:1 pressure ratio at zero flow.
i unip Oycles Office	supply pressure).	(Does not apply to high pressure 2:1 units).
	Air valve or intermediate gaskets installed incorrectly.	Install gaskets with holes properly aligned.
	Bent or missing actuator plunger.	Remove pilot valve and inspect actuator plungers.
Pump Will Not Operate	Pump is over lubricated.	Set lubricator on lowest possible setting or remove. Units are designed for lube free operation.
/ Cycle	Lack of air (line size, PSI, CFM).	Check the air line size and length, compressor capacity (HP vs. cfm required).
	Check air distribution system.	Disassemble and inspect main air distribution valve, pilot valve and pilot valve actuators.
	Discharge line is blocked or clogged manifolds.	Check for inadvertently closed discharge line valves. Clean discharge manifolds/piping.
	Deadhead (system pressure meets or exceeds air supply pressure).	Increase the inlet air pressure to the pump. Pump is designed for 1:1 pressure ratio at zero flow. (Does not apply to high pressure 2:1 units).
	Blocked air exhaust muffler.	Remove muffler screen, clean or de-ice, and re-install.
	Pumped fluid in air exhaust muffler.	Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly.
	Pump chamber is blocked.	Disassemble and inspect wetted chambers. Remove or flush any obstructions.
Pump Cycles and Will	Cavitation on suction side.	Check suction condition (move pump closer to product).
Not Prime or No Flow	Check valve obstructed. Valve ball(s) not seating properly or sticking.	Disassemble the wet end of the pump and manually dislodge obstruction in the check valve pocket. Clean out around valve ball cage and valve seat area. Replace valve ball or valve seat if damaged. Use heavier valve ball material.
	Valve ball(s) missing (pushed into chamber or manifold).	Worn valve ball or valve seat. Worn fingers in valve ball cage (replace part). Check Chemical Resistance Guide for compatibility.
	Valve ball(s)/seat(s) damaged or attacked by product.	Check Chemical Resistance Guide for compatibility.
	Check valve and/or seat is worn or needs adjusting.	Inspect check valves and seats for wear and proper setting. Replace if necessary.
	Suction line is blocked.	Remove or flush obstruction. Check and clear all suction screens or strainers.
	Excessive suction lift.	For lifts exceeding 20' of liquid, filling the chambers with liquid will prime the pump in most cases.
	Suction side air leakage or air in product.	Visually inspect all suction-side gaskets and pipe connections.
	Pumped fluid in air exhaust muffler.	Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly.
Pump Cycles Running	Over lubrication.	Set lubricator on lowest possible setting or remove. Units are designed for lube free operation.
Sluggish/Stalling,	Icing.	Remove muffler screen, de-ice, and re-install. Install a point of use air drier.
Flow Unsatisfactory	Clogged manifolds.	Clean manifolds to allow proper air flow
,,,,,,,,	Deadhead (system pressure meets or exceeds air supply pressure).	Increase the inlet air pressure to the pump. Pump is designed for 1:1 pressure ratio at zero flow. (Does not apply to high pressure 2:1 units).
	Cavitation on suction side.	Check suction (move pump closer to product).
	Lack of air (line size, PSI, CFM).	Check the air line size, length, compressor capacity.
	Excessive suction lift.	For lifts exceeding 20' of liquid, filling the chambers with liquid will prime the pump in most cases.
	Air supply pressure or volume exceeds system hd.	Decrease inlet air (press. and vol.) to the pump. Pump is cavitating the fluid by fast cycling.
	Undersized suction line.	Meet or exceed pump connections.
	Restrictive or undersized air line.	Install a larger air line and connection.
	Suction side air leakage or air in product.	Visually inspect all suction-side gaskets and pipe connections.
	Suction line is blocked.	Remove or flush obstruction. Check and clear all suction screens or strainers.
	Pumped fluid in air exhaust muffler.	Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly.
	Check valve obstructed.	Disassemble the wet end of the pump and manually dislodge obstruction in the check valve pocket.
	Check valve and/or seat is worn or needs adjusting.	Inspect check valves and seats for wear and proper setting. Replace if necessary.
	Entrained air or vapor lock in chamber(s).	Purge chambers through tapped chamber vent plugs. Purging the chambers of air can be dangerous.
Product Leaking	Diaphragm failure, or diaphragm plates loose.	Replace diaphragms, check for damage and ensure diaphragm plates are tight.
Through Exhaust	Diaphragm stretched around center hole or bolt holes.	Check for excessive inlet pressure or air pressure. Consult Chemical Resistance Chart for compatibility with products, cleaners, temperature limitations and lubrication.
Promoturo Dianhroam	Cavitation.	Enlarge pipe diameter on suction side of pump.
Fremature Diapinagin	Cavitation:	Zinargo pipo diameter en oueden elac el pampi
•	Excessive flooded suction pressure.	Move pump closer to product. Raise pump/place pump on top of tank to reduce inlet pressure. Install Back pressure device (Tech bulletin 41r). Add accumulation tank or pulsation dampener.
•		
•	Excessive flooded suction pressure.	Move pump closer to product. Raise pump/place pump on top of tank to reduce inlet pressure. Install Back pressure device (Tech bulletin 41r). Add accumulation tank or pulsation dampener. Consult Chemical Resistance Chart for compatibility with products, cleaners, temperature limitations
Failure	Excessive flooded suction pressure. Misapplication (chemical/physical incompatibility). Incorrect diaphragm plates or plates on backwards,	Move pump closer to product. Raise pump/place pump on top of tank to reduce inlet pressure. Install Back pressure device (Tech bulletin 41r). Add accumulation tank or pulsation dampener. Consult Chemical Resistance Chart for compatibility with products, cleaners, temperature limitations and lubrication. Check Operating Manual to check for correct part and installation. Ensure outer plates have not been
Failure	Excessive flooded suction pressure. Misapplication (chemical/physical incompatibility). Incorrect diaphragm plates or plates on backwards, installed incorrectly or worn.	Move pump closer to product. Raise pump/place pump on top of tank to reduce inlet pressure. Install Back pressure device (Tech bulletin 41r). Add accumulation tank or pulsation dampener. Consult Chemical Resistance Chart for compatibility with products, cleaners, temperature limitations and lubrication. Check Operating Manual to check for correct part and installation. Ensure outer plates have not been worn to a sharp edge.
Failure	Excessive flooded suction pressure. Misapplication (chemical/physical incompatibility). Incorrect diaphragm plates or plates on backwards, installed incorrectly or worn. Excessive suction lift.	Move pump closer to product. Raise pump/place pump on top of tank to reduce inlet pressure. Install Back pressure device (Tech bulletin 41r). Add accumulation tank or pulsation dampener. Consult Chemical Resistance Chart for compatibility with products, cleaners, temperature limitations and lubrication. Check Operating Manual to check for correct part and installation. Ensure outer plates have not been worn to a sharp edge. For lifts exceeding 20' of liquid, filling the chambers with liquid will prime the pump in most cases.
Failure	Excessive flooded suction pressure. Misapplication (chemical/physical incompatibility). Incorrect diaphragm plates or plates on backwards, installed incorrectly or worn. Excessive suction lift. Undersized suction line.	Move pump closer to product. Raise pump/place pump on top of tank to reduce inlet pressure. Install Back pressure device (Tech bulletin 41r). Add accumulation tank or pulsation dampener. Consult Chemical Resistance Chart for compatibility with products, cleaners, temperature limitations and lubrication. Check Operating Manual to check for correct part and installation. Ensure outer plates have not been worn to a sharp edge. For lifts exceeding 20' of liquid, filling the chambers with liquid will prime the pump in most cases. Meet or exceed pump connections.
Failure	Excessive flooded suction pressure. Misapplication (chemical/physical incompatibility). Incorrect diaphragm plates or plates on backwards, installed incorrectly or worn. Excessive suction lift. Undersized suction line. Pumped fluid in air exhaust muffler.	Move pump closer to product. Raise pump/place pump on top of tank to reduce inlet pressure. Install Back pressure device (Tech bulletin 41r). Add accumulation tank or pulsation dampener. Consult Chemical Resistance Chart for compatibility with products, cleaners, temperature limitations and lubrication. Check Operating Manual to check for correct part and installation. Ensure outer plates have not been worn to a sharp edge. For lifts exceeding 20' of liquid, filling the chambers with liquid will prime the pump in most cases. Meet or exceed pump connections. Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly.
Premature Diaphragm Failure Unbalanced Cycling	Excessive flooded suction pressure. Misapplication (chemical/physical incompatibility). Incorrect diaphragm plates or plates on backwards, installed incorrectly or worn. Excessive suction lift. Undersized suction line. Pumped fluid in air exhaust muffler. Suction side air leakage or air in product.	Move pump closer to product. Raise pump/place pump on top of tank to reduce inlet pressure. Install Back pressure device (Tech bulletin 41r). Add accumulation tank or pulsation dampener. Consult Chemical Resistance Chart for compatibility with products, cleaners, temperature limitations and lubrication. Check Operating Manual to check for correct part and installation. Ensure outer plates have not been worn to a sharp edge. For lifts exceeding 20' of liquid, filling the chambers with liquid will prime the pump in most cases. Meet or exceed pump connections. Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly. Visually inspect all suction-side gaskets and pipe connections.

For additional troubleshooting tips contact After Sales Support at service.warrenrupp@idexcorp.com or 419-524-8388



Composite Repair Parts Drawing

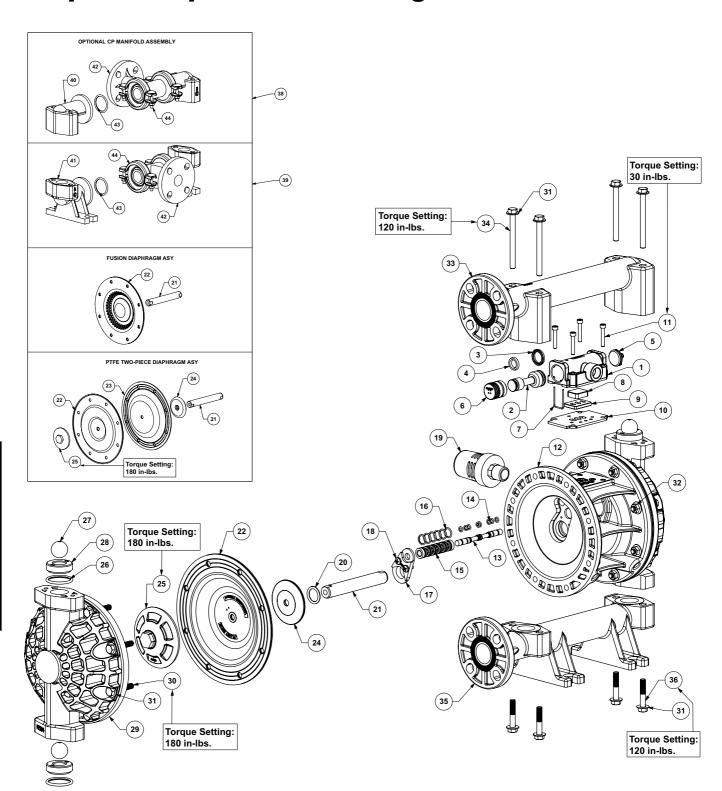



Composite Repair Parts List

Item #	COIII					
Valve Sport Assembly Includes Items 1511			Air V	alve Assembly		
1		Qty.				
2	- 1		Valve Body Assembly (Includes items 1-11)			
3 1	2	1				R & 4)
1		1	Large Valve Spool U-Cup		P98-104A	7 & 1 <u>7</u>
6	4	1	Small Valve Spool U-Cup		P98-104AUB	
7		1				
9	6	1			E500DUB ASY	
9	7	2	Staple		<u>E500F</u>	
10		1 1	C I Air Diverter		E100C1	
11		1			E100H	
Center Section Assembly Part Number Center Section Center Ce		<u> </u>	Plastic Valve Mounting Screws		\$100.4002.300 \$100.4	
Item # Oty.			Center S	ection Assembly	01001	
13	Item #	Qty.	Description	<u> </u>		
14		1	Center Section		E101A	
15		1	Pilot Spool ASY (includes item 17)		775.V004.000	
16		8	Pilot Spool O-Rings		560.023.360	
17		1	Pilot Valve Sleeve ASY (includes item 19)			
18			Pilot Valve Sleeve U-Rings Chaft/Dilat Patainar			
19			Retainer Screw			
Displace Name		1 7	Muffler		VTM-4	
Name	10	, <u>'</u>	Diaphragm A	ssembly / Elastomers	V I IVI	
Terrubber Terr	Itom #	Otv		i i	Part Number	
22		-	-	TPE/RUBBER	PTFE 2-Piece	PTFE Fusion
22 2 Back-Up Diaphragm See Below Material Charth V183F-1 V183F-1	20	2	Main Shaft O-Ring	0051/004 400		
22 2	21	11	Main Shaft	685.V001.120	P50	J-108
See Below Material Chart V183TB	22	2	Diaphragm		V183TF-1	V183F
25		_	' "			
25	23	2			V1831B	N/A
Kynar Outer Diaphragm Plate KE113 Vision Kynar Outer Diaphragm Plate Kynar Vision Vision Kynar Vision Kynar Vision	2 4				IC D\/181TO	
Valve Seat O-Ring	25		Kynar Outer Diaphragm Plate	KF113	KV181TO	IN/A
Valve Seat O-king						
See Below Material Chartly	26	4	Valve Seat O-Ring		SV190TF	, V190TES
See Below Material Chartly				"V191xx		
Item # Qty. Description Polypropulene Kynar	27	4	Valve Ball		V19	91TF
Tell			\N/a4 F	nd Accomply		
28			wete	nu Assembiv		
29	Itom #	Otv		illu Assembly	Part N	Number
30		-	Description	ind Assembly	Part N Polypropylene	Kvnar
31	28	4	Description Valve Seat	nu Assembly	Polypropylene PE108	Kynar KÉ108
32	28 29	4 2	Description Valve Seat Water Chamber	IIIU ASSEIIIDIY	Pelypropylene PE108 PE104	Kynar KE108 KE104
33	28 29 30	4 2 16	Description Valve Seat Water Chamber Water Chamber Bolt		Polypropylene PE108 PE104 SV	Kynar KE108 KE104 187A
34	28 29 30 31	4 2 16 16	Description Valve Seat Water Chamber Water Chamber Bolt Water Chamber Wash		Pelypropylene PE108 PE104 SV SV	Kynar KE108 KE104 187A 189C
35	28 29 30 31 32	4 2 16 16	Description Valve Seat Water Chamber Water Chamber Bolt Water Chamber Wash Water Chamber Nut		Polypropylene PE108 PE104 SV SV	Kynar KE108 KE104 187A 189C 185B
Suction Manifold Washer SV189C	28 29 30 31 32 33	4 2 16 16 16	Description Valve Seat Water Chamber Water Chamber Bolt Water Chamber Wash Water Chamber Nut Discharge Manifold	er	Polypropylene	Kynar KE108 KE104 187A 189C 185B
SV189C	28 29 30 31 32 33	4 2 16 16 16	Valve Seat Valve Seat Water Chamber Water Chamber Bolt Water Chamber Wash Water Chamber Nut Discharge Manifold Discharge Manifold Bo	er	Pelvpropylene PE108 PE104 SV SV PE120 PE120F	Kynar KE108 KE104 187A 189C 185B KE120 20A
Item #	28 29 30 31 32 33 34 35	4 2 16 16 16 16 1 1 4	Description Valve Seat Water Chamber Water Chamber Bolt Water Chamber Wash Water Chamber Nut Discharge Manifold Discharge Manifold Bo Suction Manifold	er lit	Pelvpropylene PE108 PE104 SV SV PE120 PE120F	Kynar KE108 KE104 187A 189C 185B KE120 20A
38	28 29 30 31 32 33 34 35 36	4 2 16 16 16 16 1 4 1	Description Valve Seat Water Chamber Water Chamber Bolt Water Chamber Wash Water Chamber Nut Discharge Manifold Discharge Manifold Suction Manifold Bolt Manifold Washer	er Ilt	Polypropylene PE108 PE104 SV SV PE120 PE120F E1	Kynar KE108 KE104 187A 189C 185B KE120 20A KE120F
38	28 29 30 31 32 33 34 35 36	4 2 16 16 16 16 1 4 1	Description Valve Seat Water Chamber Water Chamber Bolt Water Chamber Wash Water Chamber Nut Discharge Manifold Discharge Manifold Suction Manifold Bolt Manifold Washer	er Ilt	Polypropylene	Kynar KE108 KE104 187A 189C 185B KE120 20A KE120F 20B
38	28 29 30 31 32 33 34 35 36 37	4 2 16 16 16 1 1 4 1 4 8	Description Valve Seat Water Chamber Water Chamber Bolt Water Chamber Wash Water Chamber Nut Discharge Manifold Discharge Manifold Bolt Suction Manifold Bolt Suction Manifold Bolt Manifold Washer Optional CP	er Ilt	Polypropylene	Kynar KE108 KE104 187A 189C 185B KE120 20A KE120F 20B 189C
Suction Manifold ASY (includes items 41,42,43 44)	28 29 30 31 32 33 34 35 36 37	4 2 16 16 16 1 1 4 1 4 8	Description Valve Seat Water Chamber Water Chamber Bolt Water Chamber Wash Water Chamber Nut Discharge Manifold Discharge Manifold Bolt Suction Manifold Bolt Suction Manifold Bolt Manifold Washer Optional CP	er Ilt	Polypropylene	Kynar KE 108 KE 104 187A 189C 185B KE 120 20A KE 120F 20B 189C
Suction Manifold ASY (includes items 41,42,43 44)	28 29 30 31 32 33 34 35 36 37	4 2 16 16 16 1 1 4 1 4 8	Description Valve Seat Water Chamber Water Chamber Bolt Water Chamber Wash Water Chamber Nut Discharge Manifold Discharge Manifold Bolt Suction Manifold Bolt Suction Manifold Bolt Manifold Washer Optional CP Description	er Dit Manifold Assembly	Polypropylene	Kynar KE 108 KE 104 187A 189C 185B KE 120 20A KE 120F 20B 189C
Suction Manifold ASY (includes items 41,42,43 44) 475,V008.604 (PTFE Fitted) 475,V010.004	28 29 30 31 32 33 34 35 36 37	4 2 16 16 16 1 1 4 1 4 8	Description Valve Seat Water Chamber Water Chamber Bolt Water Chamber Wash Water Chamber Nut Discharge Manifold Discharge Manifold Bolt Suction Manifold Bolt Suction Manifold Bolt Manifold Washer Optional CP Description	er Dit Manifold Assembly	Polypropylene PE108 PE104 SV SV PE120 E1 PE120F E1 Polypropylene (PTFE Fitted) 475.V007.604	Kynar KE 108 KE 108 KE 104 187A 189C 185B KE 120 20A KE 120F 20B 189C Mumber Kynar (PTFE Fitted) 475.V009.604
A0	28 29 30 31 32 33 34 35 36 37	4 2 16 16 16 1 1 4 1 4 8	Description Valve Seat Water Chamber Water Chamber Bolt Water Chamber Wash Water Chamber Nut Discharge Manifold Discharge Manifold Bolt Suction Manifold Bolt Suction Manifold Bolt Manifold Washer Optional CP Description	er Dit Manifold Assembly	Polypropylene PE108 PE104 SV SV PE120 E1 PE120F E1 POlypropylene (PTFE Fitted) 475.V007.604 (XL Fitted) 475.V007.354	Kynar KE108 KE104 187A 189C 185B KE120 20A KE120F 20B 189C Number Kynar (PTFE Fitted) 475.V009.604 (XL Fitted) 475.V009.354
40 2 Discharge Elbow	28 29 30 31 32 33 34 35 36 37 Item #	4 2 16 16 16 1 1 4 1 4 8 Qty.	Description Valve Seat Water Chamber Water Chamber Bolt Water Chamber Wash Water Chamber Wush Water Chamber Nut Discharge Manifold Discharge Manifold Suction Manifold Bolt Manifold Washer Optional CP Description Discharge Manifold ASY (includes ite	Manifold Assembly ms 40,42,43 44)	Polypropylene PE108 PE104 SV SV SV PE120 E1 PE120F E1 POlypropylene (PTFE Fitted) 475.V007.604 (XL Fitted) 475.V007.354 (PTFE Fitted)	Kynar KE108 KE104 187A 189C 185B KE120 20A KE120F 20B 189C Number Kynar (PTFE Fitted) 475.V009.604 (XL Fitted) 475.V009.354
41 2 Suction Elbow	28 29 30 31 32 33 34 35 36 37 Item #	4 2 16 16 16 1 1 4 1 4 8 Qty.	Description Valve Seat Water Chamber Water Chamber Bolt Water Chamber Wash Water Chamber Wush Water Chamber Nut Discharge Manifold Discharge Manifold Suction Manifold Bolt Manifold Washer Optional CP Description Discharge Manifold ASY (includes ite	Manifold Assembly ms 40,42,43 44)	Polypropylene PE108 PE104 SV SV SV PE120 E1 PE120F E1 POlypropylene (PTFE Fitted) 475.V007.604 (XL Fitted) 475.V007.354 (PTFE Fitted) 475.V008.604	Kynar KE108 KE104 187A 189C 185B KE120 20A KE120F 20B 189C Number Kynar (PTFE Fitted) 475.V009.604 (XL Fitted) 475.V010.604
Manifold Tee	28 29 30 31 32 33 34 35 36 37 Item #	4 2 16 16 16 1 1 4 1 4 8 Qty.	Description Valve Seat Water Chamber Water Chamber Bolt Water Chamber Wash Water Chamber Wash Water Chamber Nut Discharge Manifold Bolt Suction Manifold Bolt Manifold Washer Optional CP Description Discharge Manifold ASY (includes item	Manifold Assembly ms 40,42,43 44)	Polypropylene	Kynar KE108 KE104 187A 189C 185B KE120 20A KE120F 20B 189C Number Kynar (PTFE Fitted) 475.V009.604 (XL Fitted) 475.V010.604 (XL Fitted) 475.V010.354
A3 4 PTFE Fitted Manifold Tee O-Ring V188TF	28 29 30 31 32 33 34 35 36 37 Item #	4 2 16 16 16 1 4 1 4 8 Qty.	Description Valve Seat Water Chamber Water Chamber Bolt Water Chamber Wash Water Chamber Wash Water Chamber Mut Discharge Manifold Discharge Manifold Bolt Suction Manifold Bolt Suction Manifold Washer Optional CP Description Discharge Manifold ASY (includes item Discharge Elbow	Manifold Assembly ms 40,42,43 44)	Polypropylene PE108 PE104 SV SV SV PE120 E1 PE120F E1 PE120F E1 SV Part N Polypropylene (PTFE Fitted) 475.V007.604 (XL Fitted) 475.V007.354 (PTFE Fitted) 475.V008.604 (XL Fitted) 475.V008.354 PV186	Kynar KE108 KE104 187A 189C 185B KE120 20A KE120F 20B 189C Number Kynar (PTFE Fitted) 475.V009.604 (XL Fitted) 475.V010.604 (XL Fitted) 475.V010.354 KE186
V188XL	28 29 30 31 32 33 34 35 36 37 Item # 38	4 2 16 16 16 1 4 1 4 8 Qty.	Description Valve Seat Water Chamber Water Chamber Bolt Water Chamber Wash Water Chamber Wash Water Chamber Wush Water Chamber Mut Discharge Manifold Discharge Manifold Bolt Suction Manifold Bolt Manifold Washer Optional CP Description Discharge Manifold ASY (includes item Discharge Elbow Suction Elbow	Manifold Assembly ms 40,42,43 44)	Pe108 PE108 PE108 PE104 SV SV PE120 E1 PE120F E1 PE120F E1 POlypropylene (PTFE Fitted) 475.V007.604 (XL Fitted) 475.V007.354 (PTFE Fitted) 475.V008.604 (XL Fitted) 475.V008.354 PV186 PV187	Kynar KE108 KE104 187A 189C 185B KE120 20A KE120F 20B 189C Vumber Kynar (PTFE Fitted) 475.V009.604 (XL Fitted) 475.V010.604 (XL Fitted) 475.V010.354 KE186 KE187
Clamp Assembly	28 29 30 31 32 33 34 35 36 37 Item # 38	4 2 16 16 16 1 4 1 4 8 Qty.	Description Valve Seat Water Chamber Water Chamber Bolt Water Chamber Wash Water Chamber Wash Water Chamber Wush Water Chamber Mut Discharge Manifold Chamber Manifold Bolt Suction Manifold Bolt Manifold Washer Optional CP Description Discharge Manifold ASY (includes item Suction Manifold ASY (includes item Discharge Elbow Suction Elbow Manifold Tee PTFE Fitted Manifold Tee	Manifold Assembly ms 40,42,43 44) ns 41,42,43 44)	Polypropylene PE108 PE104 SV SV SV PE120 E1 PE120F E1 PE120F E1 VI POlypropylene (PTFE Fitted) 475.V007.604 (XL Fitted) 475.V007.354 (PTFE Fitted) 475.V008.604 (XL Fitted) 475.V008.354 PV186 PV187 PV188	Kynar KE108 KE104 187A 189C 185B KE120 20A KE120F 20B 189C Number Kynar (PTFE Fitted) 475.V009.604 (XL Fitted) 475.V010.604 (XL Fitted) 475.V010.354 KE186 KE187 KV188
Material Diaphragm P/N Valve Ball P/N O-Ring P/N Neoprene V183N-1 V191N N/A Buna Nitrile V183BN-1 V191BN V90BN Viton V183VT-1 V191VT V90VT Nordel V183ND-1 V191ND V90ND Santoprene V183TPEXL-1 V191TPEXL V190XL Hytrel V183TPEFG V191TPEFG N/A Geolast V183G V191G N/A Acetal N/A V191A N/A	28 29 30 31 32 33 34 35 36 37 Item # 38	4 2 16 16 16 1 1 4 1 4 8 Qty.	Description Valve Seat Water Chamber Water Chamber Bolt Water Chamber Wash Water Chamber Wash Water Chamber Mut Discharge Manifold Discharge Manifold Bolt Suction Manifold Bolt Manifold Washer Optional CP Description Discharge Manifold ASY (includes item Discharge Elbow Suction Elbow Manifold Tee PTFE Fitted Manifold Tee County XL Fitted Manifold Tee County Water Chamber Wash Water Chamber Wash Wash Suction Manifold Tee County XL Fitted Manifold Tee County Water Chamber Wash Water Chamber Wash Wash Water Chamber Wash Wash Wash Water Chamber Wash	Manifold Assembly ms 40,42,43 44) ns 41,42,43 44)	Polypropylene	Kynar KE108 KE104 187A 189C 185B KE120 20A KE120F 20B 189C Number Kynar (PTFE Fitted) 475.V009.604 (XL Fitted) 475.V010.604 (XL Fitted) 475.V010.354 KE186 KE187 KV188 88TF 88XL
Neoprene V183N-1 V191N N/A Buna Nitrile V183BN-1 V191BN V90BN Viton V183VT-1 V191VT V90VT Nordel V183ND-1 V191ND V90ND Santoprene V183TPEXL-1 V191TPEXL V190XL Hytrel V183TPEFG V191TPEFG N/A Geolast V183G V191G N/A Acetal N/A V191A N/A	28 29 30 31 32 33 34 35 36 37 Item # 38	4 2 16 16 16 1 1 4 1 4 8 Qty.	Description Valve Seat Water Chamber Water Chamber Bolt Water Chamber Wash Water Chamber Wash Water Chamber Wash Water Chamber Mut Discharge Manifold Discharge Manifold Bolt Suction Manifold Bolt Manifold Washer Optional CP Description Discharge Manifold ASY (includes item Suction Manifold ASY (includes item Discharge Elbow Suction Elbow Manifold Tee PTFE Fitted Manifold Tee O- Clamp Assembly	Manifold Assembly ms 40,42,43 44) ns 41,42,43 44) D-Ring Ring	Polypropylene	Kynar KE108 KE104 187A 189C 185B KE120 20A KE120F 20B 189C Number Kynar (PTFE Fitted) 475.V009.604 (XL Fitted) 475.V010.604 (XL Fitted) 475.V010.354 KE186 KE187 KV188 88TF 88XL
Buna Nitrile V183BN-1 V191BN V90BN Viton V183VT-1 V191VT V90VT Nordel V183ND-1 V191ND V90ND Santoprene V183TPEXL-1 V191TPEXL V190XL Hytrel V183TPEFG V191TPEFG N/A Geolast V183G V191G N/A Acetal N/A V191A N/A	28 29 30 31 32 33 34 35 36 37 Item # 38 39 40 41 42 43 44	4 2 16 16 16 1 1 4 1 4 8 Qty. 1	Description Valve Seat Water Chamber Water Chamber Bolt Water Chamber Wash Water Chamber Wash Water Chamber Wush Water Chamber Wush Discharge Manifold Discharge Manifold Bolt Suction Manifold Bolt Manifold Washer Optional CP Description Discharge Manifold ASY (includes item Discharge Elbow Suction Elbow Manifold Tee PTFE Fitted Manifold Tee C XL Fitted Manifold Tee C Clamp Assembly Flastomer Manifold Tele Pastomer Manifold Tele	Manifold Assembly ms 40,42,43 44) as 41,42,43 44) D-Ring Ring Ring aterial Specifications	Pe108 PE108 PE108 PE109 SV SV PE120 E1 PE120F E1 PE120F E1 POlypropylene (PTFE Fitted) 475.V007.604 (XL Fitted) 475.V007.354 (PTFE Fitted) 475.V008.604 (XL Fitted) 475.V008.354 PV186 PV187 PV188 V1. SV	Kynar KE108 KE104 187A 189C 185B KE120 20A KE120F 20B 189C Vumber Kynar (PTFE Fitted) 475.V009.604 (XL Fitted) 475.V010.604 (XL Fitted) 475.V010.354 KE186 KE187 KV188 88TF 88XL /189
Viton V183VT-1 V191VT V90VT Nordel V183ND-1 V191ND V90ND Santoprene V183TPEXL-1 V191TPEXL V190XL Hytrel V183TPEFG V191TPEFG N/A Geolast V183G V191G N/A Acetal N/A V191A N/A	28 29 30 31 32 33 34 35 36 37 Item # 38 40 41 42 43 44 Mate	4 2 16 16 16 1 1 4 1 4 8 Qty. 1	Description Valve Seat Water Chamber Water Chamber Bolt Water Chamber Wash Water Chamber Wash Water Chamber Wush Water Chamber Wush Discharge Manifold Discharge Manifold Bolt Suction Manifold Bolt Manifold Washer Optional CP Description Discharge Manifold ASY (includes item Discharge Elbow Suction Elbow Manifold Tee PTFE Fitted Manifold Tee Oclamp Assembly Elastomer Mit	Manifold Assembly ms 40,42,43 44) as 41,42,43 44) D-Ring Ring aterial Specifications Valve Ball P/N	Pe108 PE108 PE108 PE104 SV SV PE120 E1 PE120F E1 PE120F Fart N Polypropylene (PTFE Fitted) 475.V007.604 (XL Fitted) 475.V007.354 (PTFE Fitted) 475.V008.604 (XL Fitted) 475.V008.354 PV186 PV187 PV188 V1: SV	Kynar KE108 KE104 187A 189C 185B KE120 20A KE120F 20B 189C Number Kynar (PTFE Fitted) 475.V009.604 (XL Fitted) 475.V010.604 (XL Fitted) 475.V010.354 KE186 KE187 KV188 88TF 88XL 7189
Nordel V183ND-1 V191ND V90ND Santoprene V183TPEXL-1 V191TPEXL V190XL Hytrel V183TPEFG V191TPEFG N/A Geolast V183G V191G N/A Acetal N/A V191A N/A	28 29 30 31 32 33 34 35 36 37 Item # 38 40 41 42 43 44 Mate	4 2 16 16 16 1 1 4 1 1 4 8 8 Qty. 1 1 2 2 2 4 4 4 erial prene	Description Valve Seat Water Chamber Water Chamber Bolt Water Chamber Wash Water Chamber Wash Water Chamber Wush Water Chamber Must Discharge Manifold Suction Manifold Bolt Manifold Washer Optional CP Description Discharge Manifold ASY (includes item Discharge Manifold Tee Otal Assembly Light Manifold Tee Otal Assembly Elastomer Medical Manifold Tee Otal Assembly Diaphragm P/N V183N-1	Manifold Assembly ms 40,42,43 44) as 41,42,43 44) D-Ring Ring aterial Specifications Valve Ball P/N V191N	Polypropylene PE108 PE104 SV SV SV PE120 E1 PE120F E1 PE120F E1 POlypropylene (PTFE Fitted) 475.V007.604 (XL Fitted) 475.V007.354 (PTFE Fitted) 475.V008.604 (XL Fitted) 475.V008.354 PV188 PV187 PV188 V1: SV	Kynar KE108 KE104 187A 189C 185B KE120 20A KE120F 20B 189C Number Kynar (PTFE Fitted) 475.V009.604 (XL Fitted) 475.V010.604 (XL Fitted) 475.V010.354 KE186 KE187 KV188 88TF 88XL /189 ng P/N V/A
Santoprene V183TPEXL-1 V191TPEXL V190XL Hytrel V183TPEFG V191TPEFG N/A Geolast V183G V191G N/A Acetal N/A V191A N/A	28 29 30 31 32 33 33 34 35 36 37 tem # 38 40 41 42 43 44 Mate Neop Buna	4 2 16 16 16 16 1 1 4 1 1 4 8 8	Description Valve Seat Water Chamber Water Chamber Bolt Water Chamber Wash Water Chamber Wash Water Chamber Must Discharge Manifold Discharge Manifold Bolt Suction Manifold Bolt Manifold Washer Optional CP Description Discharge Manifold ASY (includes item Suction Manifold ASY (includes item Discharge Elbow Suction Elbo	ms 40,42,43 44) D-Ring Ring aterial Specifications Valve Ball P/N V191BN	Polypropylene PE108 PE104 SV SV SV PE120 E1 PE120F E1 PE120F E1 POlypropylene (PTFE Fitted) 475.V007.604 (XL Fitted) 475.V007.354 (PTFE Fitted) 475.V008.604 (XL Fitted) 475.V008.354 PV186 PV187 PV188 V1 SV	Kynar KE108 KE104 187A 189C 185B KE120 20A KE120F 20B 189C (PTFE Fitted) 475.V009.604 (XL Fitted) 475.V009.354 (PTFE Fitted) 475.V010.604 (XL Fitted) 475.V010.854 KE186 KE187 KV188 88TF 88XL /189 ng P/N V/A 0BN
Hytrel V183TPEFG V191TPEFG N/A Geolast V183G V191G N/A Acetal N/A V191A N/A	28 29 30 31 32 33 34 35 36 37 Item # 38 40 41 42 43 44 Match Neogy Buna Vit	4 2 16 16 16 16 1 1 4 1 1 4 8 8	Description Valve Seat Water Chamber Water Chamber Bolt Water Chamber Wash Water Chamber Wash Water Chamber Mut Discharge Manifold Discharge Manifold Bolt Suction Manifold Bolt Manifold Washer Optional CP Description Discharge Manifold ASY (includes item Discharge Elbow Suction Manifold Tee PTFE Fitted Manifold Tee O Clamp Assembly Elastomer Me Diaphragm P/N V183N-1 V183N-1 V183VT-1	Manifold Assembly ms 40,42,43 44) as 41,42,43 44) D-Ring Ring aterial Specifications Valve Ball P/N V191N V191N V191N V191VT	Polypropylene PE108 PE108 PE104 SV SV PE120 E1 PE120F E1 PE120F E1 Polypropylene (PTFE Fitted) 475.V007.604 (XL Fitted) 475.V007.354 (PTFE Fitted) 475.V008.604 (XL Fitted) 475.V008.354 PV186 PV187 PV188 V1 V1 SV O-Ri V9	Kynar
Geolast V183G V191G N/A Acetal N/A V191A N/A	28 29 30 31 32 33 34 35 36 37 Item # 38 40 41 42 43 44 Mate Neop Buna Vit Noi	4 2 16 16 16 16 1 1 4 1 1 4 8 8	Description Valve Seat Water Chamber Water Chamber Bolt Water Chamber Wash Suction Manifold Bolt Suction Manifold Bolt Manifold Washer Optional CP Description Discharge Manifold ASY (includes item Discharge Elbow Suction Elbow Manifold Tee O XL Fitted Manifold Tee O Clamp Assembly Elastomer Manifold Tee O Clamp Assembly V183N-1 V183N-1 V183ND-1	Manifold Assembly ms 40,42,43 44) as 41,42,43 44) D-Ring Ring aterial Specifications Valve Ball P/N V191N V191N V191N V191ND	Pe108 PE108 PE108 PE109 SV SV PE120 E1 PE120F E1 PE120F E1 POlypropylene (PTFE Fitted) 475.V007.604 (XL Fitted) 475.V007.354 (PTFE Fitted) 475.V008.604 (XL Fitted) 475.V008.354 PV188 PV188 V1: SV O-Ri V9 V9	Kynar KE 108 KE 104
Acetal N/A V191A N/A	28 29 30 31 32 33 34 35 36 37 Item # 38 40 41 42 43 44 Mate Neop Buna Vitt Not Santo	4 2 16 16 16 16 1 1 4 1 1 4 8 8 Qty. 1 1 2 2 2 4 4 4 erial orene Nitrile ton rdel prene	Description Valve Seat Water Chamber Water Chamber Bolt Water Chamber Wash Water Chamber Wash Water Chamber Wush Water Chamber Wush Discharge Manifold Discharge Manifold Bolt Suction Manifold Bolt Manifold Washer Optional CP Description Discharge Manifold ASY (includes item Discharge Manifold ASY (includes item Discharge Elbow Suction Elbow Manifold Tee PTFE Fitted Manifold Tee O Clamp Assembly Elastomer Manifold Tee O V183N-1 V183N-1 V183ND-1 V183VT-1 V183VT-1 V183TPEXL-1	Manifold Assembly ms 40,42,43 44) as 41,42,43 44) D-Ring Ring aterial Specifications Valve Ball P/N V191N V191BN V191VT V191ND V191TPEXL	Pe108 PE108 PE108 PE109 SV SV PE120 E1 PE120F E1 PE120F E1 POlypropylene (PTFE Fitted) 475.V007.604 (XL Fitted) 475.V007.354 (PTFE Fitted) 475.V008.604 (XL Fitted) 475.V008.354 PV186 PV187 PV188 V1: V1: SV O-Ri N V9 V9 V9 V9	Kynar
Stainless Steel N/A V191SS N/A	28 29 30 31 32 33 34 35 36 37 Item # 38 40 41 42 43 44 Mate Neop Buna Vitt Noop Santo Hy	4 2 16 16 16 17 4 11 4 8 Qty. 1 1 2 2 2 4 4 erial prene Nitrile oon rddel pprene trel	Description Valve Seat Water Chamber Water Chamber Bolt Water Chamber Wash Water Chamber Wash Water Chamber Wash Water Chamber Mut Discharge Manifold Discharge Manifold Bolt Suction Manifold Bolt Manifold Washer Optional CP Description Discharge Manifold ASY (includes item Suction Manifold ASY (includes item Discharge Elbow Suction Elbow Manifold Tee PTFE Fitted Manifold Tee Collamp Assembly Elastomer Mit Diaphragm P/N V183N-1 V183N-1 V183ND-1 V183TPEFFG V183G	Manifold Assembly ms 40,42,43 44) as 41,42,43 44) D-Ring Ring aterial Specifications Valve Ball P/N V191NN V191NN V191ND V191TPEXL V191TPEFG V191G	Polypropylene PE108 PE104 SV SV SV PE120 E1 PE120F E1 PE120F E1 POlypropylene (PTFE Fitted) 475.V007.604 (XL Fitted) 475.V007.354 (PTFE Fitted) 475.V008.604 (XL Fitted) 475.V008.354 PV188 PV187 PV188 O-Ri V9 V9 V9 V9	Kynar KE 108 KE 104
	28 29 30 31 32 33 34 35 36 37 Item # 38 40 41 42 43 44 Match Neony Buna Vitt Non Santo Hy Gec Acc	4 2 16 16 16 16 16 1 1 4 1 1 4 8 8	Description Valve Seat Water Chamber Water Chamber Bolt Water Chamber Wash Water Chamber Wash Water Chamber Wash Water Chamber Mut Discharge Manifold Discharge Manifold Bolt Suction Manifold Bolt Manifold Washer Optional CP Description Discharge Manifold ASY (includes item Discharge Elbow Suction Manifold Tee PTFE Fitted Manifold Tee O Clamp Assembly Elastomer Me Diaphragm P/N V183N-1 V183N-1 V183ND-1 V183TPEK-1 V183TPEK-1 V183G N/A	Manifold Assembly ms 40,42,43 44) as 41,42,43 44) D-Ring Ring aterial Specifications V191N V191N V191N V191ND V191PEXL V191TPEXL V191TPEFG V191G V191A	Polypropylene PE108 PE104 SV SV PE120 E1 PE120F E1 PE120F E1 Polypropylene (PTFE Fitted) 475.V007.604 (XL Fitted) 475.V007.354 (PTFE Fitted) 475.V008.604 (XL Fitted) 475.V008.354 PV186 PV187 PV188 V1 V1 SV O-Ri V9 V9 V9	Kynar KE 108 KE 104



Written Warranty

5 - YEAR Limited Product Warranty

Quality System ISO9001 Certified • Environmental Management Systems ISO14001 Certified

Versa-Matic warrants to the original end-use purchaser that no product sold by Versa-Matic that bears a Versa-Matic brand shall fail under normal use and service due to a defect in material or workmanship within five years from the date of shipment from Versa-Matic's factory.

~ See complete warranty at http://www.versamatic.com/pdfs/VM%20Product%20Warranty.pdf ~

DECLARATION OF CONFORMIT

DECLARATION DE CONFORMITE • DECLARACION DE CONFORMIDAD • ERKLÄRUNG BEZÜGLICH EINHALTUNG DER VORSCHRIFTEN DICHIARAZIONE DI CONFORMITÀ • CONFORMITEITSVERKI ARING • DEKI ARATION OM ÖVERENSSTÄMMEI SE EF-OVERENSSTEMMELSESERKLÆRING • VAATIMUSTENMUKAISUUSVAKUUTUS • SAMSVARSERKLÄRING DECLARAÇÃO DE CONFORMIDADE

MANUFACTURED BY:

FABRIQUE PAR: **FABRICADA POR** HERGESTELLT VON: FABBRICATO DA: VERVAARDIGD DOOR: TILLVERKAD AV: FABRIKANT: VALMISTAJA: PRODUSENT:

FABRICANTE:

VERSA-MATIC®

Warren Rupp, Inc. A Unit of IDEX Corporation 800 North Main Street P.O. Box 1568 Mansfield, OH 44901-1568 USA

Tel: 419-526-7296 Fax: 419-526-7289



PUMP MODEL SERIES: E SERIES, V SERIES, VT SERIES, VSMA3, SPA15, **RE SERIES AND U2 SERIES**

This product complies with the following European Community Directives:

Ce produit est conforme aux directives de la Communauté européenne suivantes: Este producto cumple con las siguientes Directrices de la Comunidad Europea: Dieses produkt erfüllt die folgenden Vorschriften der Europäischen Gemeinschaft:

Questo prodotto è conforme alle seguenti direttive CEE:

Dir produkt voldoet aan de volgende EG-richtlijnen:

Denna produkt överensstämmer med föliande EU direktiv:

Versa-Matic, Inc., erklærer herved som fabrikant, at ovennævnte produkt er i overensstemmelse med bestemmelserne i Direkktive:

Tämä tuote täyttää seuraavien EC Direktiivien vaatimukstet:

Dette produkt oppfyller kravene til følgende EC Direktiver:

Este produto está de acordo com as seguintes Directivas comunitárias:

This product has used the following harmonized standards to verify conformance:

Ce materiel est fabriqué selon les normes harmonisées suivantes, afin d' en garantir la conformité:

Este producto cumple con las siguientes directrices de la comunidad europa:

Dieses produkt ist nach folgenden harmonisierten standards gefertigtworden, die übereinstimmung wird bestätigt:

Questo prodotto ha utilizzato i seguenti standards per verificare la conformita':

De volgende geharmoniseerde normen werden gehanteerd om de conformiteit van dit produkt te garanderen:

För denna produkt har följande harmoniserande standarder använts för att bekräfta överensstämmelse:

Harmoniserede standarder, der er benyttet:

Tässä tuotteessa on sovellettu seuraavia yhdenmukaistettuja standardeja:

Dette produkt er produsert i overenstemmelse med fløgende harmoniserte standarder:

Este produto utilizou os seguintes padrões harmonizados para varificar conformidade:

AUTHORIZED/APPROVED BY:

Approuve par: Aprobado por: Genehmiat von: approvato da: Goedaekeurd door: Underskrift: Valtuutettuna: Bemyndiget av: Autorizado Por:

Dave Roseberry **Engineering Manager** **DATE: August 10, 2011**

FECHA: DATUM: DATA: PÄIVÄYS:

2006/42/EC

EN809:1998+

A1:2009

to Annex VIII

on Machinery, according

04/19/2012 REV 07

Genuine Parts, Real Value



vs.

Kit: Annual Savings \$1,299

Partial Repair

Repair Kit

Ordering Parts Kits Over Individual Components:

- Reduces frequency of repairs
- Reduces downtime
- Reduces cost
- Increase your uptime
- Improve parts availability
- Extended service life

P	JH.	A.	626
	4 1		303

14 Z.A. LES PIBOULES 84300 LES TAILLADES FRANCE TEL. 04.90.78.19.99

TEL. 04.90.78.19.99 FAX 04.90.78.09.00 E-Mail : contact@pha.fr

		9 9
COST OF WET END REPAIR	Partial Repair (1 Diaphragm)	Complete Repair Kit
Parts	\$56	\$148
Labor	\$125	\$125
Lost Product	\$200	\$200
Down-Time	\$1,000	\$1,000
Annual Frequency of Repair	2	1
Estimated Cost Per Repair:	\$1,381	\$1,473
Estimated Annual Cost:	\$2,772	\$1,473
Estimated Annual Savings:*	\$0	\$1,299

Example Data

Repair = 1 hour • Pump model #: E2AA2D220-OE • Buna wet-end repair Labor rate fully burdened at \$125/hour • Lost product assumes paint

